

## ◆ Technical support

Please visit SEUIC's official website "www.chinaautoid.net" to download User Manual , SDK , different Apps or software in order to help you better use the device.

2016 SEUIC Company All rights reserved.

It is strictly prohibited to copy, transfer, distribute and store any content in the document in any form without the SEUIC's permission.

JIANGSU SEUIC TECHNOLOGY CO.,LTD

Company address: NO.15 Xinghuo Road, Nanjing New High Technology Industry Zone, Nanjing City, Jiangsu Province, China

Hotline: 0086-400-777-0876

Company official website: www.seuic.com

 
 
Products official website: www.chinaautoid.net

Mailbox: AUTOID@seuic.com


Post code: 210061

**Seuic**  
JIANGSU SEUIC TECHNOLOGY CO.,LTD

## QUICK START GUIDE

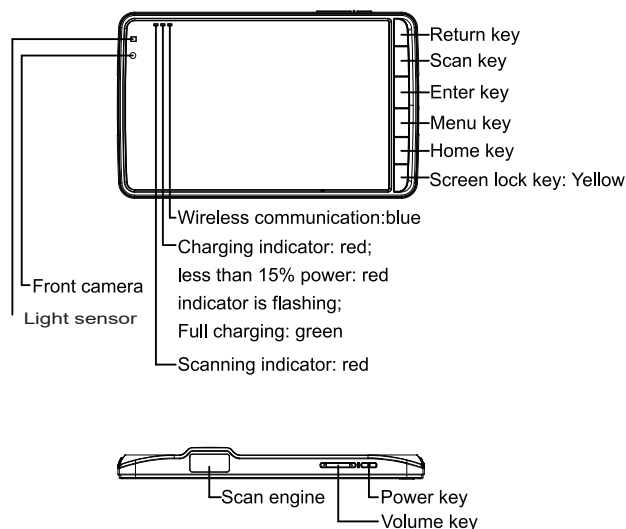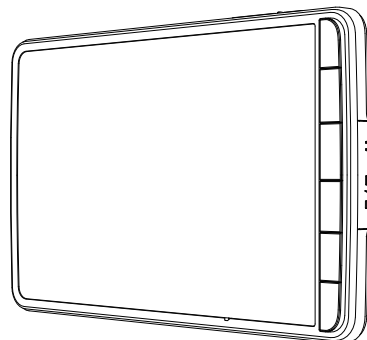

*Applicable to AUTOID Pad series*

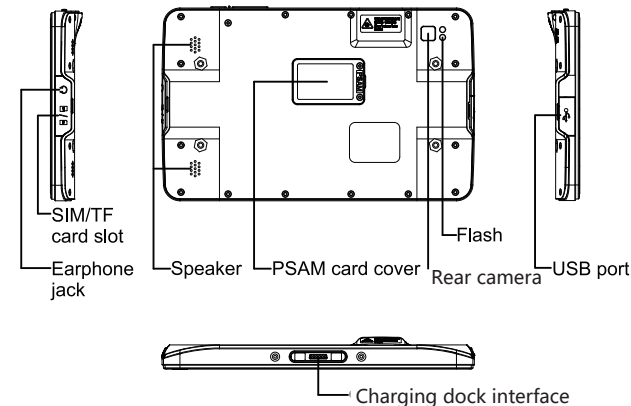 

## ◆ First use

On initial use of the device or opening of some applications, quick tips will pop up to guide you on how to use them.

## ◆ Power on

Long press on power key until AUTOID Pad vibrates.

## ◆ Power off

Operating menu will pop up after long press on power button, then choose Power off to shut device off.

## ◆ Install SIM card and SD card

Open the rubber cap, there are two card slots, the one on top is for SIM card and the other one is for SD card. Insert the SIM into the corresponding slot in according to the direction sign until the notification of sound or vibration. Then insert the SD card in the same way.

Note: The AUTOID Pad does not support hot-plug, please restart the device after accident hot-plug.

## ◆ Charging

 
The device could be charged through USB cable , end flap cable, and charging dock.

1 . USB cable:use USB cable to connect adapter or PC for charging . Red indicator means under charging ; green one means it is been fully charged.

2. End flap cable: Use the end flap cable to connect the AUTOID Pad with PC or charging adapter, red indicator means under charging while green indicator means it has been fully charged.

3. Charging dock: First place the end flap AUTOID pad into the charging dock, then plug one end of the charging cable into the power port of the charging dock and the other end to power supply. Red indicator means it's being charging and green indicator means it has been fully charged.

Note: End flap cable, charging dock and USB cable cannot be used simultaneously. In case of the device be idle for quite a long time, please charge it at least once every two months to avoid overdischarging.

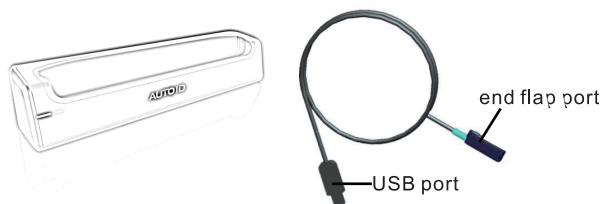

Single slot charging dock

End flap cable

## ◆ Common functions

### ➤ Connect with PC

Seuic's integrated scan tool and the customers' scan tool are optional to use in scanning barcodes.

### ➤ Problems shooting:

Problem1. There is no light when scanning.

Solution1: Please check whether the scan engine is open or closed.

Problem2. One scan results in two barcodes.

Solution2: Please check whether the Seuic's integrated scan tool and the third party application are opened simultaneously. If yes, close the Seuic's integrated scan tool and disable the "Automatically on when power on".

### ➤ WIFI connection

1. Click "settings" in main screen.
2. In "wireless and networks", turn on Wi-Fi.
3. AUTOID Pad will automatically search and list the available Wi-Fi.
4. Please select the one that you want, and then click it to connect.

If you select a secured network, you will need to input password.

Note: If both WLAN and mobile data are opened simultaneously, WLAN will be of higher preference. When WLAN is inaccessible, the device will pop up notification to check whether to use the mobile data.

### ➤ LTE/TD-SCDMA/WCDMA/EVDO/GSM/CDMA connection

1. In first use, when you insert SIM card, AUTOID Pad will automatically select and register network service company. The mobile data is opened by default. Follow path of Settings > More > Mobile networks > Preferred network mode to select the appropriate network mode.
2. GSM of 2G/3G/4G is available.

(Note: The default preferred network mode is a general mode.

When you do not use the network service, please close the data service in time to extend the standby time and save data.)

## ◆ Attention

1. Do not soak USB port and end flap of AUTOID Pad into water;
2. Do not use full ROM, otherwise it will cause system exception;
3. Please close 2D scan engine when you don't use it, please do not keep it open for a long time;
4. Please do not directly look into the light beam of scan engine during scanning in order to avoid injury;
5. Please first connect the USB cable (or cradle cable) to device; then connect to the USB port in PC;
6. Please restart the device after replacing the SIM card.

## ◆ Trouble shooting

1. Please check whether your SIM card is out of service. If you can't use network, then check whether the AUTOID Pad supports the corresponding network mode;
2. If the AUTOID Pad is unable to connect to a PC, please check whether the USB cable and the AutoID Pad is correctly connected.
3. If the device sleep mode cannot be activated, please check whether network data exchange is working or whether the FLASH and NAND are in the operating process of reading and writing data.